


a - c = eccentric rod

e = eccentric

b - d = connecting rod

d = crank pin

S = crankshaft

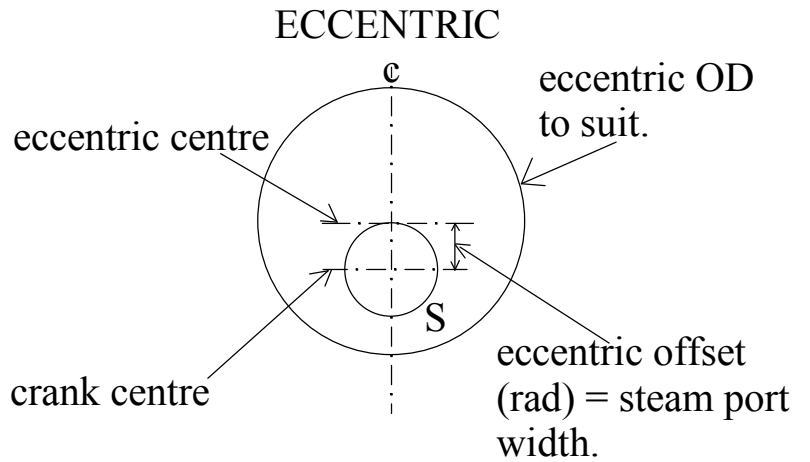

PISTON VALVE DIMENSIONS

Same as inside edges between steam ports

