



To re-fill Gas tank: -

- 1 Undo knurled hand nut to release gas pipe.
- 2 Rotate cams clear of tank feet and lift tank out.
- 3 Re-fill tank away from model
- 4 Return filled tank to model
- 5 Lock tank in place with cams.
- 6 Reconnect gas pipe making sure o-ring is in place and in good condition then hand tighten knurled nut to secure.